



Cellular Modem Instruction Sheet

MIS00000015 Rev A

Info in this sheet applies to:

- NanoStation Loco M2 (XMT-95)

This unit has been shipped with a wireless access point. This device will provide the ability to operate your sign remotely.

American Signal performs the initial setup on the WIFI. All the information needed to access your sign and WIFI is listed below. To secure and maintain a high quality connection; it is recommended to be within a 120 feet of the sign you are trying to access. Amsig equipment will run on most web browsers but Amsig strongly suggests using **GOOGLE CHROME**.

Note: The WIFI enabled device you are using to connect to your sign must be on the **192.168.1.X** subnet

CONNECT TO WIFI: Search your available networks for the last four digits of the VIN number to the sign you are trying to connect to. Select that network and enter the Amsig default password. *amsigwireless*

ACCESS WIFI USER INTERFACE WIRED CONNECTION: Enter *192.168.1.1* into your web browser's address field.

ACCESS WIFI USER INTERFACE WIRELESS CONNECTION: Connect to the WIFI network. Open your web browser and enter *192.168.1.1* into your web browser's address field.

ACCESS SIGN THROUGH WIRELESS CONNECTION: Connect to sign's wireless network. Open your web browser and enter *192.168.1.199* into your web browser's address field.

WIFI USER INTERFACE USERNAME: *Ubnt*

WIFI USER INTERFACE PASSWORD: *amsig1*

* The WIFI user interface is the webpage used to change WIFI settings.

For questions and support for wireless access points contact American Signal Service Department *770-448-6650 and press 3 for service or email service@amsig.com.*