

Displaying a message

1. Turn on sign and wait for handheld to take you to main screen.
2. Press escape.
3. Enter "owner" as password.
4. Press "x"
5. When asked to skip verification, enter "y" and press enter.
6. Press 3 then enter.
7. Press 1 then enter.
8. Press 1 then enter.
9. If asked to "blank" the sign, press "n" then enter.
10. If asked to use preprogrammed, enter "n" then press enter.
11. At current msg sequence, press 1 then enter.
12. Scroll to the desired message and then type in the number next to it. Press enter.
13. If you want multiple pages of messages repeat for 2-6. If not, make sure 2-6 are set to 999.
14. Press 0 then enter
15. Select 5 for message rate and press enter.
16. Press the sign display button and the message should be displayed.

Creating a message

1. Turn on sign and wait for handheld to take you to main screen.
2. Press escape.
3. Enter "owner" as password.
4. Press "x"
5. When asked to skip verification, enter "y" and press enter.
6. Press 3 then enter.
7. Press 2 then enter.
8. Hold shift and press the down arrow until you are at the last message.
9. Type in the next number that is in line and press enter. (Ex. last msg 256, type 257)
10. When asked to enter a msg description press the backspace button to erase what is there and type in what you want to call that msg and press enter.
11. Select the line you want the message in 1-3 and press enter.
12. Type in the message and press enter.
13. When done press 0 then enter.
14. "on time" if you would like the message to stay on longer select a higher number, if you're wanting a flash effect go with a lower number then press enter
15. "off time" for more of a solid message select a low number. for more of a flash, stay in the middle/ higher number. press enter
16. Press 1 then enter.
17. Press 1 then enter If asked to "blank" the sign, press "n" then enter.
18. If asked to use preprogrammed, enter "n" then press enter.
19. At current msg sequence, press 1 then enter.
20. Scroll to the desired message and then type in the number next to it. Press enter.

21. If you want multiple pages of messages repeat for 2-6. If not, make sure 2-6 are set to 999.
22. Press 0 then enter
23. Select 5 for message rate and press enter.
24. Press the sign display button and the message should be displayed.
- 25.